



FosPower Solar Crank Radio Model D8 w/ LCD Display for Emergency with AM/FM/WB, Flashlight, Aux Port, And 10,000mAh Power Bank - Orange/Black

Model: FOSPPB-2436PP



DO NOT RETURN THE PRODUCT

There are good days and there are bad days. If there is a problem with your product, or you are unhappy with it, we apologize for our mistake.

PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT



Contact us:
Toll Free: 1-833-888-FOSP (1-833-888-3677)
Direct: (612) 389-4432
Email: support@fospower.com

©2024 FosPower Inc. All rights reserved.

v05/29/2024

Thank you for purchasing this FosPower product. For optimum performance and safety, please read these instructions carefully before connecting, operating, or using this product. Please keep this for future reference.




Package Includes

- 1x Solar Crank Radio
- 1x Holding Strap with Compass
- 1x Charging Cable
- 1x User Manual

Specifications

Frequency	FM 87 - 108 MHz AM 520 – 1710 KHz WB 1: 162.400 MHz 2: 162.425MHz 3: 162.450MHz 4: 162.475MHz 5: 162.500MHz 6: 162.525MHz 7: 162.550MHz
Power Source	10000mAh / 3.7V
Working Voltage	2.4V – 4.2V
Power Consumption	7W (Max)
Power of Flashlight	2W
Power of Reading Lamp	1.2W
Type-C Input	5V / 2A
LED Flashlight	200lm (Max)
Waterproof Rating	IPX3
Item Dimensions	6.89 x 3.15 x 3.86 in. / 175 x 80 x 98 mm
Item Weight	1.26 lb / 570 g

Product Diagram

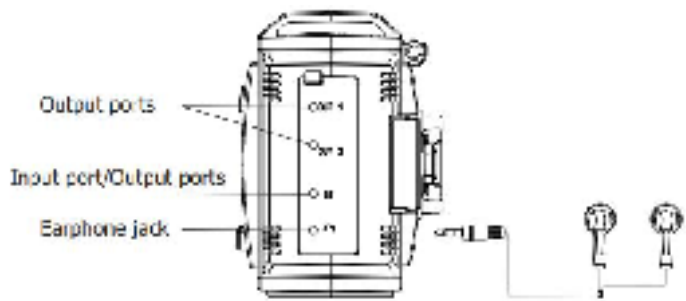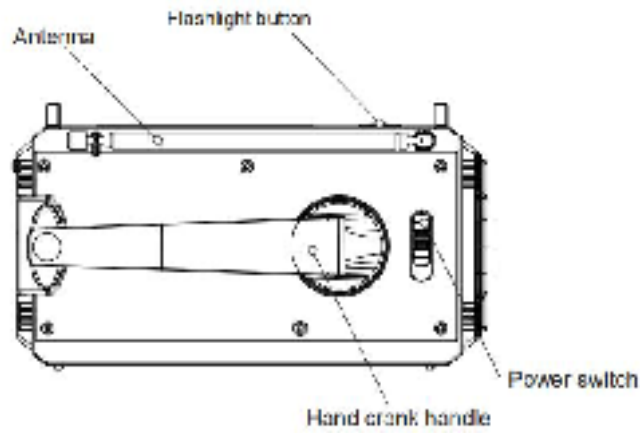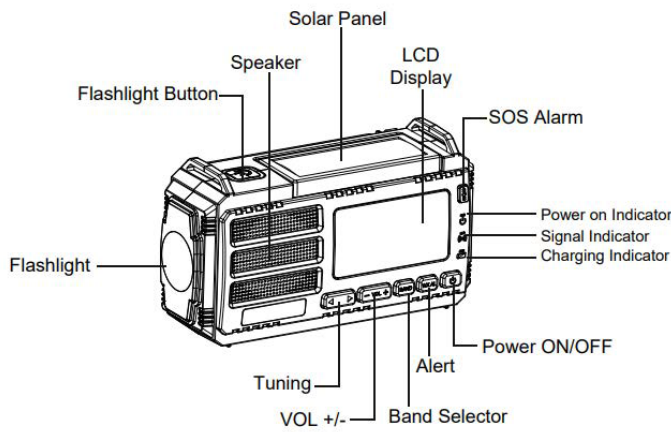

Operation

NOTE: Please turn the power switch (on the back) to “ON” before using any function.

Radio

- Press the Power button to turn on the radio. Press it again to turn it off.
- Press the Band Selector to choose AM, FM, or WB.
- Press the Tuning button to navigate between stations, and press the Volume button to adjust the volume.
- A green LED lights up when the radio finds a station. Extend the antenna for better signal reception.

Weather Alert

- When the radio is on, press the “WX AL” button to switch to weather alert mode. When an alert is received, “ALERT” will flash on the screen and the device will alarm.
- Press the “WX AL” or “BAND” button to exit weather alert mode.

SOS Alarm

- Press and hold the SOS button for 2 seconds to activate the loud siren and flashing far beam.
- Press the SOS button again to turn them off.

Flashlight

- Press the Flashlight button once to turn on the far beam.
- Press the button a second time to turn on the dipped beam.
- Press the button a third time to turn on both the far and dipped beams.
- Press the button a fourth time to turn off both lights.

Reading Lamp

- Open the solar panel to turn on the reading light.
- Close the solar panel to turn off the reading light.

Earphone Jack

- Plug a headphone connector into the 3.5mm earphone jack to listen to the radio with headphones.
- If you press the SOS button while headphones are connected, the SOS alarm will be played through the headphones.

Phone Charging

- The USB-A and USB-C ports can charge your phone or other USB devices. The radio's internal batteries have a capacity of 10000mAh.
- You might need to use your own cable to charge your device.

NOTE: It's suggested to use this function only in emergencies to extend the internal battery life.

Power the Radio

A. USB-C Charging

- Use the supplied cable to connect the USB-C input port to a USB power source for charging the radio's internal batteries. The red charging indicator will flash slowly.
- Please ensure the radio is charged at least once every three months.

B. Hand Crank Dynamo

- The radio's internal batteries can be charged by turning the handle at the back of the device to activate the dynamo. The handle can be turned either clockwise or counterclockwise.
- The red charging indicator should illuminate when the handle is being turned.
- Turning the handle at a speed of 130 rpm for one minute will provide either 5 minutes of radio listening or 10 minutes of flashlight illumination.

C. Solar Power

- Expose the solar panel to clear sunlight to maximize charging efficiency.
- The red charging indicator should illuminate when the panel receives enough sunlight to start charging.
- This method is primarily used for maintaining batteries or prolonging battery life.

Safety Instructions

- Hand crank for 1 minute to activate the internal battery when it is used for the first time or has been left idle for more than 60 days.
- Fully charge the unit before initial use.
- To protect the battery, the radio will shut down when the battery voltage is lower than 2.7V.
- The radio will shut down in the event of overload or a short circuit.
- Avoid over-discharging the unit as it may reduce battery life or cause damage to the battery.
- The device should not be exposed to dripping or splashing.
- Do not use or charge the device in areas with high temperatures.
- Avoid shining the flashlight directly into the eyes.

Limited Lifetime Warranty

This FosPower product includes a limited lifetime warrenty. Please visit our FosPower website for more details.

Recycling The Product

To dispose this product properly, please follow the recycling process regulated in your area.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.